

SUPREME[®]

TRIMMER

The World's Trimmer Company[®]



Follow us on Social Media
For Daily Content



FOLLOW US: @SUPREMETRIMMER

SUPREME[®]

TRIMMER

USER MANUAL
WARRANTY CARD



MULTIGROOMER 3.0

ALL-IN-ONE TRIMMER



Check out our full line
of products on
our Amazon Store



Scan QR Code to be redirected to
Supreme Trimmer Amazon Store.

Follow us on Social Media For Daily Content



User Manual Warranty Card

**Model: SMG3030
Multigroomer 3.0**

PG 1: Kit Contents

PG 2: Technical Parameter & Safety Cautions


PG 3: Use Instructions

PG 4: With & Without Comb Guides

PG 5: Maintenance & Charging

PG 6-7: New Products

 PG 8: Warranty & Customer Service

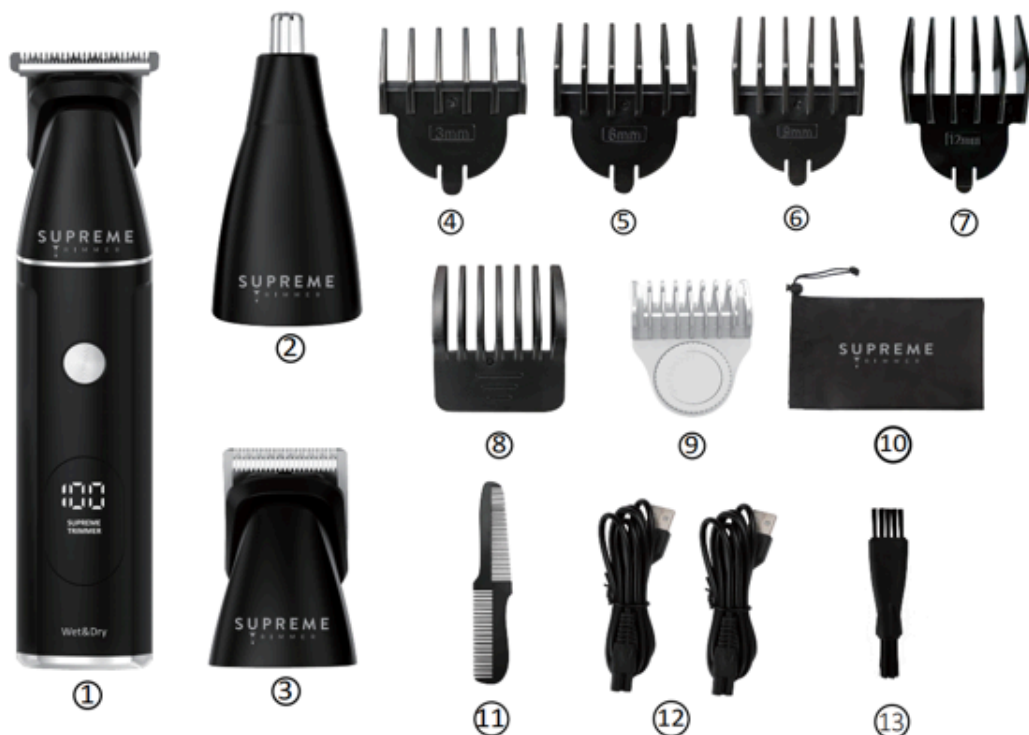

- 1) T-Blade Trimmer
- 2) Nose & Ear Trimmer
- 3) U-Blade Trimmer
- 4) 3mm Guard Comb
- 5) 6mm Guard Comb
- 6) 9mm Guard Comb
- 7) 12mm Guard Comb
- 8) Beard Guard Comb
- 9) Adjustable Comb
- 10) Travel Bag
- 11) Hair Comb
- 12) 2x USB Chargers
- 13) Cleaning Brush
- 14) Instruction Manual
- 15) Warranty Card

TECHNICAL PARAMETER

Input: DC 5V	Worldwide Voltage: 100-240V
Rated Voltage: 3.7V	Power: 5W
Charging Time: 120 mins	Run Time: 120 mins

SAFETY CAUTIONS

- Please read & understand the operation manual completely. Basic safety precautions should always be followed.

⚠ IMPORTANT CHILD SAFETY ⚠

ALWAYS KEEP OUT OF REACH OF CHILDREN – THIS IS NOT A TOY.

- Blades can & will cut children if used as toy.
- Please be cautious when using on younger children.

IMPORTANT SAFETY

- UK Only: Do not charge this appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off.
- Always inspect the appliance before use for noticeable signs of damage such as broken blades, dents, faulty battery, etc.
- If your Multigroomer has damages, please contact customer support via phone, text or email. (Please see last page of manual)
- Only use the attachments supplied with this Multigroomer.

- Make sure your Multigroomer is off and unplugged when changing the guide combs, changing/cleaning blades or assembling parts. Always supervise your Multigroomer when being charged or plugged in.
- Multigroomer 3.0 features a travel lock. Hold the on/off button for 5 seconds to keep trimmer from turning on while traveling or storing.

INSTRUCTIONS FOR USE

- Test one section on the leg or arm before using your Multigroomer 3.0
- Please note, it takes 2-4 weeks for your skin to adapt to a trimmer.

Oiling Instructions

- For optimum cutting performance, it is highly recommended to oil the blades after every use.
- Remove the blade guard and switch the appliance on.
- Hold the Multigroomer at a 45 degree angle and apply 2 drops of oil directly onto the blades.
- Switch off the unit and remove any excess oil by gently dabbing with a cloth before using on hair.

Changing the Magnetic Heads

- Before changing the heads, ensure the appliance is switched off.
- To remove the head, hold the Multigroomer with one hand, hold the head with the other and simply pull up to release the head from the unit.
- To attach a head, align the slots on the head with the ribs on both sides of the trimmer until it meets the magnet and you hear it click securely.


Comb Guides

- 4 guide combs are included in your Multigroomer 3.0 Kit (3/6/9/12mm) to be used on your T-blade.
- 1 beard guide comb (2-6mm) and 1 adjustable guide comb to be used on your U-Blade.

Do NOT use the Multigroomer if the teeth on the attachments are damaged or missing. Injury may occur.

Attaching the Comb Guides to the Trimmer


- Slide the trimmer teeth and the top of the blades into the space under the comb guide. (Fig 1)
- Press the back tab of the guide down onto the blade until you hear it click. (Fig 2)

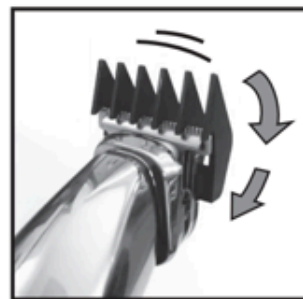

(Fig.1)



(Fig.2)

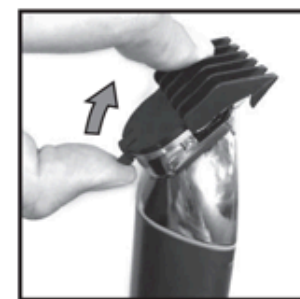

(Fig.3)

Using the Trimmer without the Comb Guides

- The T-Blade and U-Blade can be used without the guide combs to edge, detail and get a closer cut of 0.2mm.
- To remove the comb guide, pull the back tab of the comb upwards which will release it from the blade. (Fig 3)

Using the Nose & Ear Trimmer

- Only use the trimmer at the entrance of the ear or nose.
- Insert the trimmer into the nose or ear and gently move the trimmer in a circular motion.
- Never turn the trimmer off while trimming nose or ear hair.

 **DO NOT USE NOSE & EAR TRIMMER DEEPER THAN ENTRANCE AS IT COULD CAUSE INJURY** 

MAINTENANCE & CHARGING

To maintain optimum performance, the Multigroomer and attachments should be cleaned after each use:

- Blades, Nose/Ear trimmer and guide combs are washable.
- You can use cleaning solution or water with soap to clean the attachments.
- Dip the cutters, turn the machine on until all hair has been removed from blades and trimmer.
- Rinse and dry thoroughly before storage.
- Do not disassemble the blades.
- Periodically, it may be necessary to oil the blades. After cleaning attach a trimmer head, switch on and oil the blades using a few drops of lubricating oil (STO710 Available).

Charging your Multigroomer 3.0

- When Multigroomer 3.0 is running low on battery, the LED indicators will flash.
- 2 Hours of charge will provide 2 Hours of run time.
- This Multigroomer can be used corded while charging or cordless.
- At least 10% battery is recommended for cordless use.
- Multigroomer includes 2 USB chargers which allows for universal charging and use.

Check out Our New Products



Scan QR Code for Aftershave Wipes
A Better Way to Aftershave



Scan QR Code for Trimmers
Ideal for Size Zero Cuts, Fades, Lineups, Beard,
Mustache & Touch ups of All Sorts



Scan QR Code for Clippers
Ideal for All Hair Cutting Needs



Scan QR Code for Foil Shavers
Ideal for Fades and Close Shaves

WARRANTY INFO

12 MONTH LIMITED WARRANTY AGAINST DEFECTS OR LACK OF CRAFTSMANSHIP.

Our product carries warranty against Defective material of workmanship for 1 full year from the date of purchase. Any product determined to be defective in material or workmanship during the warranty period will be repaired or replaced without the cost of parts or labor to consumer.

CUSTOMER SERVICE

Please Reach out to our Customer Service team for any Questions or Concerns regarding your Multigroomer 3.0. We are here to assist on all matters and take great pride in taking care of our customers.



Scan QR code to Submit a "Contact Me" form

CALL,TEXT OR EMAIL: M-F 8AM-3PM PST
EMAIL: support@supremetrimmer.com
PHONE: +1(818) 626-8065(USA)
WEBSITE:WWW.SUPREMETRIMMER.COM

SUPREME[®]

TRIMMER



Model:STF101/BLACK
Electric Shaver

Please read the instructions manual before operating.

Instruction Manual

SUPREME[®]

TRIMMER

against your hair while maintaining contact with the foil.

8. In order to achieve the closest shave and avoid unnecessary wear on the foils, be sure that both foils contact the skin simultaneously all the time. Holding the shaver at an angle where only one foil contacts the skin will cause distortion of the foil and may result in skin irritation.
9. To facilitate cutting and avoid foil wear, use minimal pressure to apply to the shaver to your skin.
10. To maximize shaving comfort, be sure to clean the shaver thoroughly after each use.

USER MAINTENANCE




If shaver will be unused for a long period of time, please store it in a safe, cool, dry place. Don't wrap cord tightly around shaver. Do not hang the shaver by the power cord.

DRY CLEANING WITH BRUSH


1. Remove the foil assembly by pressing the button located on the right side of the unit. Grasp the foil assembly on both sides and gently lift it off the shaver.
2. Gently tap the base of the foil assembly on a flat surface so that the hairs inside can fall out.
3. Lightly brush the hairs out from the cutters. You can remove them from the shaver if necessary. Blow out any remaining loose hairs.
4. Reassemble the cutters and foil assembly after drying them thoroughly.



This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection point.

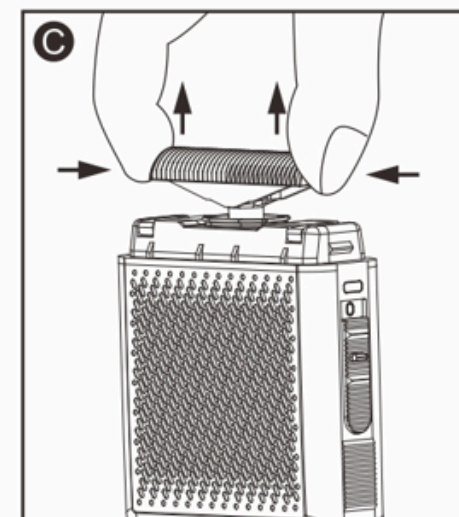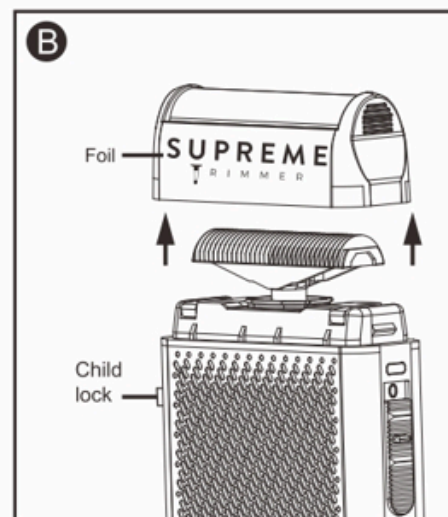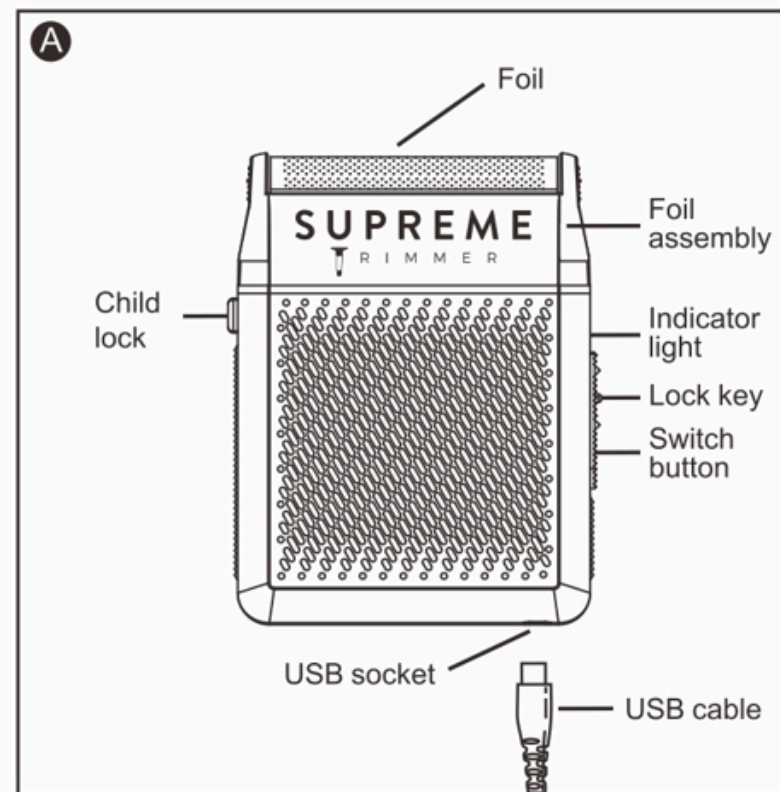

KIT INCLUDES:

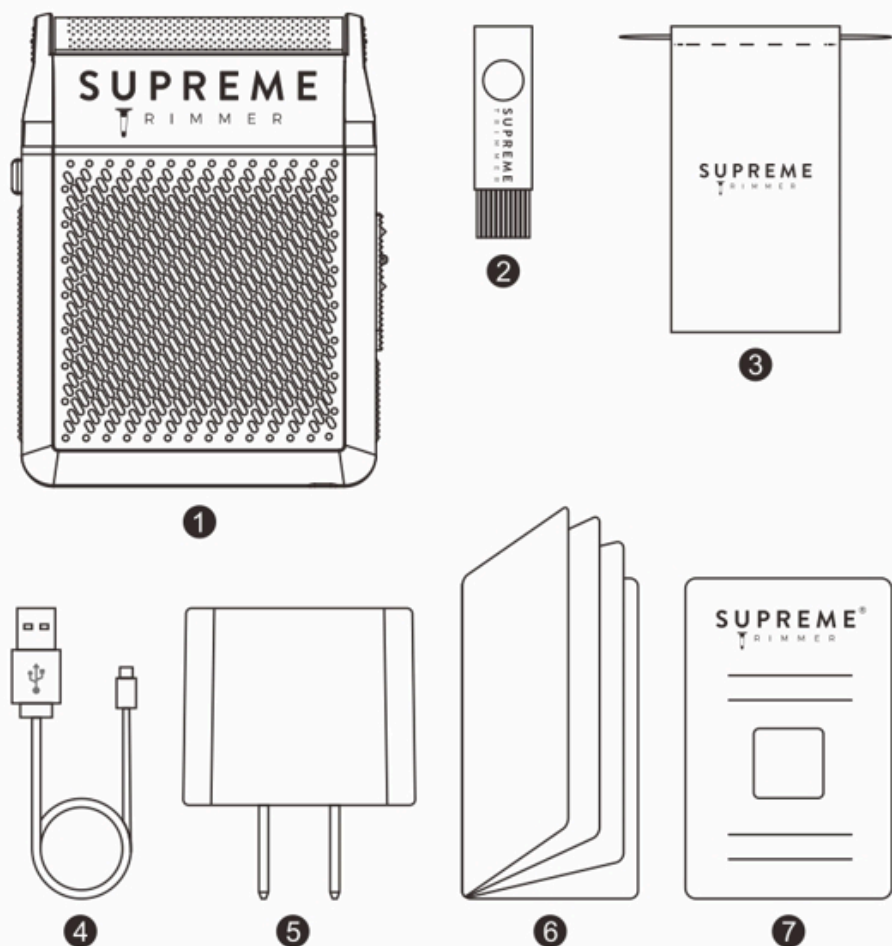

- ① Electric shaver ② Cleaning brush ③ Storage bag
- ④ USB charging cord ⑤ Charging adapter ⑥ Instruction manual
- ⑦ Warranty card

SPARE PARTS

Please reach out to us if you can purchase Foil and cutter separately (model SB11)

Product troubleshooting

Common issues

Issues	Possible reasons	Solutions
Bad shaving performance	Blade mesh is damaged or abrasion Dirty and stuck blade mesh Low battery	Replace the blade mesh Clean the blade mesh thoroughly Connect and charge the shaver
Cannot be switch on	Flat battery Power button failed	Connect and charge the shaver File a warranty claim with our customer service
No flashing light when charging	Charging light or electric circuit error	File a warranty claim with our customer service
Skin allergy after shaving	Your skin may take times to adapt to the electric shaver	Around 2-3 weeks adaptation period.
Charging failed	Shaver is broken down Charging temperature is too low or too high	File a warranty claim with our customer service Charge the shaver under an environment of 41 ℉ to 95 ℉

Please Reach out to our Customer Service team for any Questions or Concerns regarding your STF101 Solo Foil



Email: support@supremetrimmer.com

Phone: 1-818-626-8065 (USA)

Website: www.supremetrimmer.com



FOLLOW US: @SUPREMETRIMMER